




# CL2-A1 Chlorine Sensor



PATENTED

Figure 1 CL2-A1 Schematic Diagram

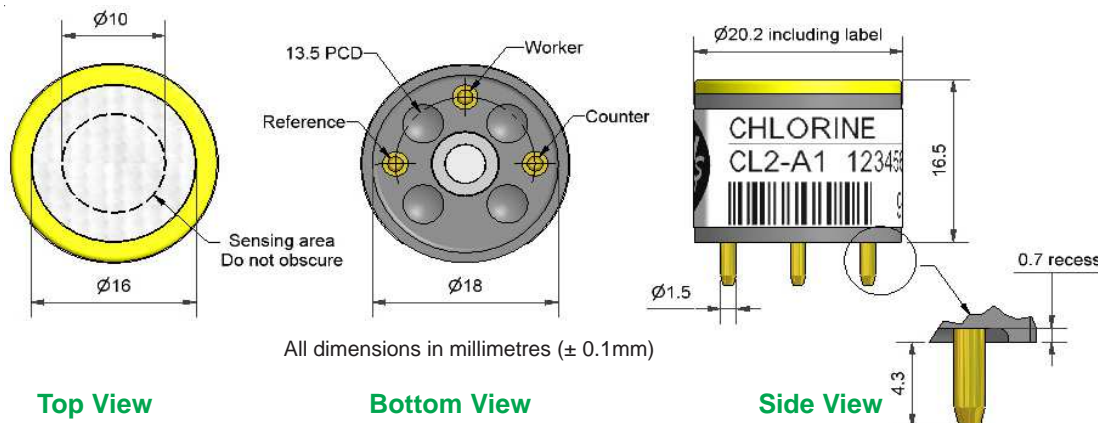

Technical Specification

PERFORMANCE	Parameter	Specification	Range
	Sensitivity	nA/ppm in 10ppm Cl <sub>2</sub>	-350 to -750
	Response time	t <sub>90</sub> (s) from zero to 10ppm Cl <sub>2</sub> (33Ω load resistor)	< 60
	Zero current	ppm equivalent in zero air	± 0.4
	Resolution	RMS noise (ppm equivalent, 33Ω load resistor)	< 0.02
	Range	ppm limit of performance warranty	20
	Linearity	ppm error at full scale, linear at zero and 5ppm Cl <sub>2</sub>	± 1.5
	Overgas limit	maximum ppm for stable response to gas pulse	50

LIFETIME	Parameter	Specification	Range
	Zero drift	ppm equivalent change/year in lab air, monthly test	< 0.05
	Sensitivity drift	% change/year in lab air, monthly test	< 10
	Operating life	months until 80% original signal (24 month warranted)	> 24

ENVIRONMENTAL	Parameter	Specification	Range
	Sensitivity @ -20°C	% (output @ -20°C/output @ 20°C) @ 10ppm Cl <sub>2</sub>	65 to 85
	Sensitivity @ 50°C	% (output @ 50°C/output @ 20°C) @ 10ppm Cl <sub>2</sub>	105 to 125
	Zero @ -20°C	ppm equivalent change from 20°C	< ± 0.2
	Zero @ 50°C	ppm equivalent change from 20°C	< 0 to -0.8

CROSS SENSITIVITY	Gas	Sensitivity	Specification	Range
	H <sub>2</sub> S	sensitivity	% measured gas @ 20ppm	< -300
	NO <sub>2</sub>	sensitivity	% measured gas @ 10ppm	100
	NO	sensitivity	% measured gas @ 50ppm	< 3
	SO <sub>2</sub>	sensitivity	% measured gas @ 20ppm	< -8
	CO	sensitivity	% measured gas @ 400ppm	< 0.1
	H <sub>2</sub>	sensitivity	% measured gas @ 400ppm	< 0.1
	C <sub>2</sub> H <sub>4</sub>	sensitivity	% measured gas @ 400ppm	< 0.1

KEY SPECIFICATIONS	Parameter	Specification	Range
	Temperature range	°C	-20 to 50
	Pressure range	kPa	80 to 120
	Humidity range	%rh continuous	15 to 90
	Storage period	months @ 3 to 20°C (stored in sealed pot)	6
	Load resistor	Ω (for optimum performance)	33
	Weight	g	< 6




At the end of the product's life, do not dispose of any electronic sensor, component or instrument in the domestic waste, but contact the instrument manufacturer, Alphasense or its distributor for disposal instructions.

**NOTE:** all sensors tested and stored at ambient environments unless otherwise stated. As applications of use are outside our control, the information provided is given without legal responsibility. Customers should test under their own conditions, to ensure that the sensors are suitable for their own requirements.



# CL2-A1 Performance Data

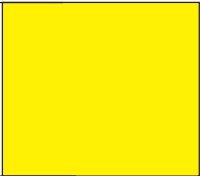

# Technical Specification

**Figure 2 Sensitivity Temperature Dependence**

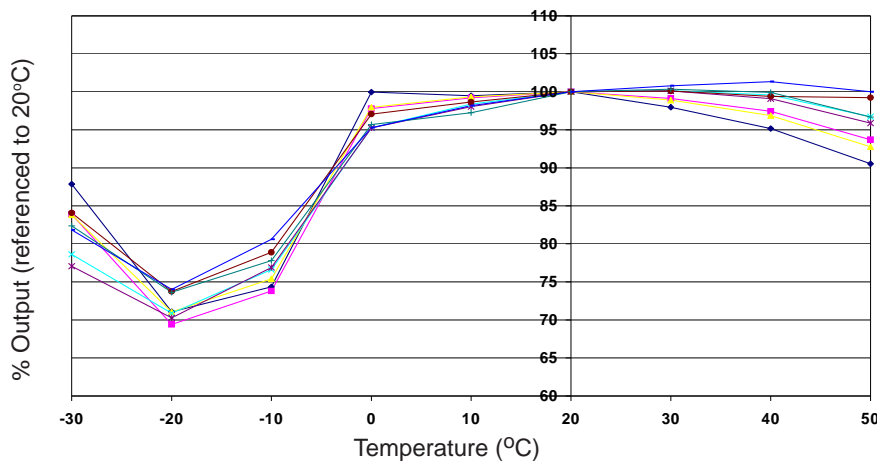


Figure 2 shows the variation in sensitivity caused by changes in temperature.

This data is taken from a typical batch of sensors. The mean and 95% confidence intervals are shown.

Chlorine gas tests are difficult, especially at higher temperatures.

**Figure 3 Zero Temperature Dependence**

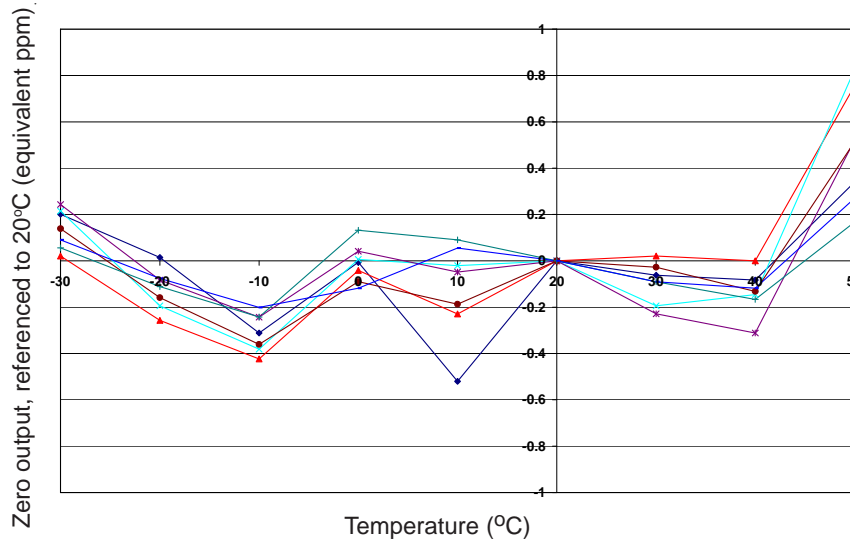


Figure 3 shows the variation in zero output caused by changes in temperature, expressed as ppm gas equivalent, referenced to zero at 20°C.

This data is taken from a typical batch of sensors.

**Figure 4 Response to 10ppm Cl<sub>2</sub> changes with temperature**

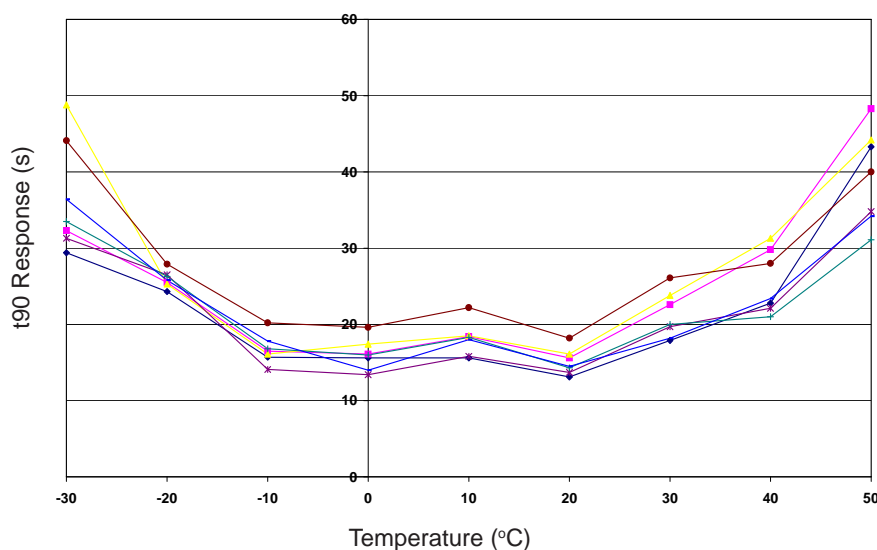


Figure 4 shows the response time temperature dependence for a typical batch of sensors.

Normally the response time increases as the temperature decreases, but for chlorine it also increases at higher temperatures, reflecting the complex chemistry.

For further information on the performance of this sensor, on other sensors in the range or any other subject, please contact Alphasense Ltd. For Application Notes visit "[www.alphasense.com](http://www.alphasense.com)".

*In the interest of continued product improvement, we reserve the right to change design features and specifications without prior notification. The data contained in this document is for guidance only. Alphasense Ltd accepts no liability for any consequential losses, injury or damage resulting from the use of this document or the information contained within. (©ALPHASENSE LTD) Doc. Ref. CL2A1/MAR17*