




VOC-B4 4-Electrode Volatile Organic Compound Sensor



PATENTED

Figure 1 VOC-B4 Schematic Diagram

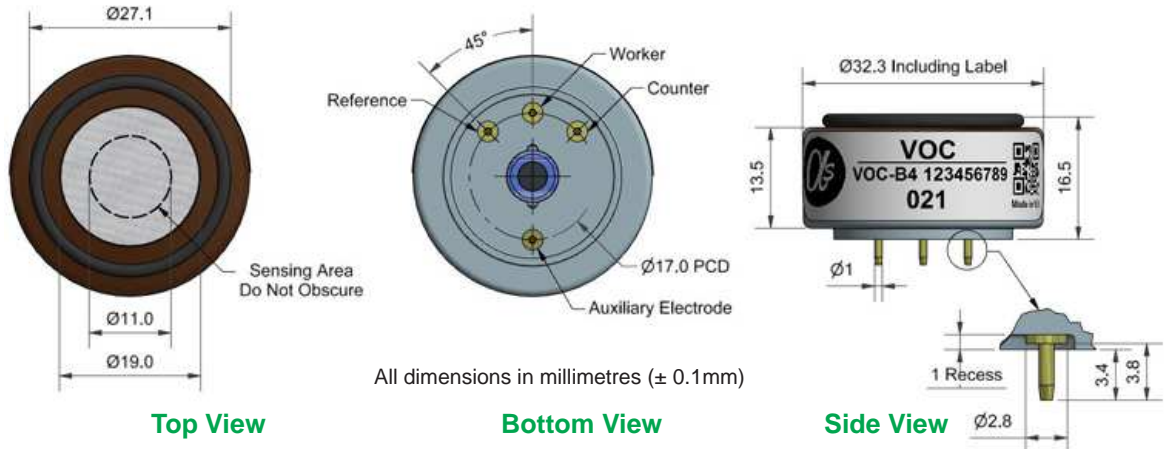

Technical Specification

SPECIFICATION CO SENSING

PERFORMANCE	Parameter	Value	Range
	Sensitivity	nA/ppm in 2ppm CO	400 to 700
	Response time	t_{90} (s) from zero to 2ppm CO	< 30
	Zero current	nA in zero air at 20°C	± 200
	Noise*	± 2 standard deviations (ppb equivalent)	20
	Range	ppm limit of performance warranty	100
	Linearity	ppm CO error at full scale, linear at zero, 10ppm CO	± 1
	Overgas limit	maximum ppm for stable response to gas pulse	1000

LIFETIME	Parameter	Value	Range
	Zero drift	ppb equivalent change/year in lab air	± 500
	Sensitivity drift	% change/year in lab air, monthly test	< 15
	Operating life	months until 50% original signal (24 month warranted)	> 36

ENVIRONMENTAL	Parameter	Value	Range
	Sensitivity @ -20°C (% output @ -20°C/output @ 20°C) @ 2ppm CO		60 to 80
	Sensitivity @ 50°C (% output @ 50°C/output @ 20°C) @ 2ppm CO		90 to 110
	Zero @ -20°C	nA change from 20°C	± 20
	Zero @ 50°C	nA change from 20°C	1800 to 2200

CROSS SENSITIVITY


Gas	Sensitivity	% measured gas @	Gas	Sensitivity	% measured gas @
C ₂ H ₆ O	sensitivity	< 1ppm	C ₂ H ₆ O		< 100
H ₂ S	sensitivity	@ 5ppm	H ₂ S		< 350
NO ₂	sensitivity	@ 5ppm	NO ₂		< -80
Cl ₂	sensitivity	@ 5ppm	Cl ₂		< -40
NO	sensitivity	@ 5ppm	NO		< 30
SO ₂	sensitivity	@ 5ppm	SO ₂		< 80
H ₂	sensitivity	@ 100ppm	H ₂ at 20°C		< 50
C ₂ H ₄	sensitivity	@ 40ppm	C ₂ H ₄		< 120
NH ₃	sensitivity	@ 20ppm	NH ₃		< -0.1
CO ₂	sensitivity	@ 5% vol	CO ₂		< 0.1

KEY SPECIFICATIONS	Parameter	Value	Range
	Temperature range	°C	-30 to 50
	Pressure range	kPa	80 to 120
	Humidity range	% rh continuous	15 to 90
	Storage period	months @ 3 to 20°C (stored in sealed pot)	6
	Load resistor	Ω (AFE circuit is recommended)	33 to 100
	Weight	g	< 13

NOTE: all sensors are tested at ambient environmental conditions, with 10 ohm load resistor, unless otherwise stated. As applications of use are outside our control, the information provided is given without legal responsibility. Customers should test under their own conditions, to ensure that the sensors are suitable for their own requirements.



VOC-B4 Performance Data

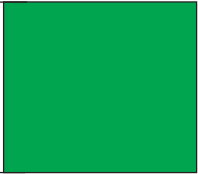

Technical Specification

Figure 2 Linearity from 0 to 10ppm CO

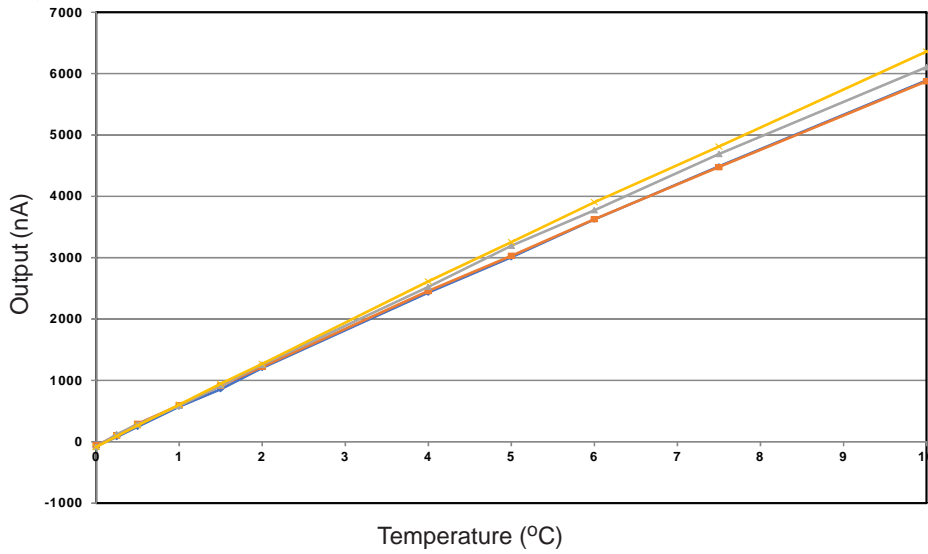


Figure 2 shows example sensor response at concentrations of up to 10ppm CO

Figure 3 Zero Temperature Dependence

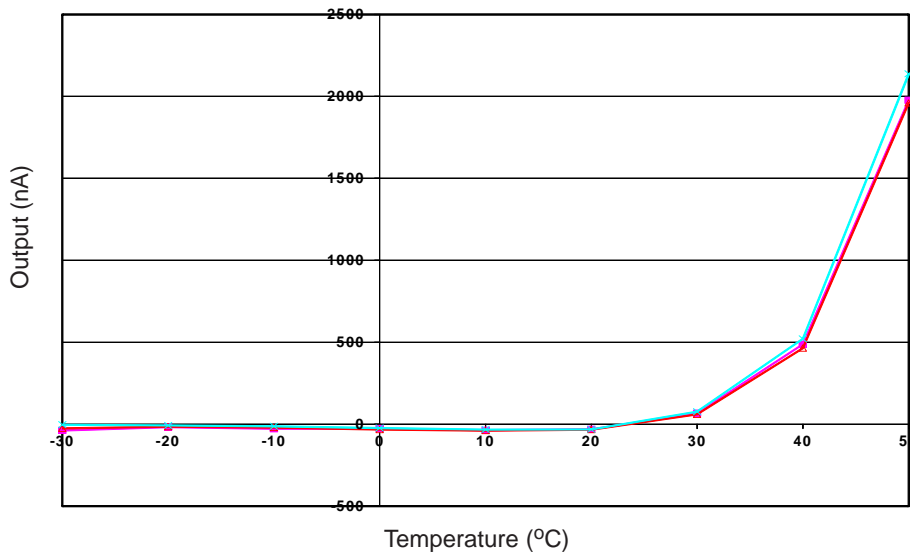


Figure 3 shows example variation in zero output of the working electrode caused by changes in temperature, expressed as nA.



At the end of the product's life, do not dispose of any electronic sensor, component or instrument in the domestic waste, but contact the instrument manufacturer, Alphasense or its distributor for disposal instructions.

For further information on the performance of this sensor, on other sensors in the range or any other subject, please contact Alphasense Ltd. For Application Notes visit "www.alphasense.com".



VOC-B4 4-Electrode Volatile Organic Compound Sensor

PATENTED

The VOC-B4 detects both VOCs and CO gases. Using both a VOC-B4 and a CO-B4 sensor in combination allows the estimation of VOC concentration at 0V bias.

The data given in this TDS refers to the use of the VOC-B4 sensor at 0V bias. Other voltages within the range 0 to 0.3V can also be applied (see application note AAN-805)

In order to calculate the VOC concentration, it is necessary to ensure the signals from the two sensors have been corrected for electronic zero offset, sensor zero offset and temperature dependence, and sensitivity (nA/ppm) calibration and temperature dependence.

SPECIFICATION ETHANOL (C₂H₆O) SENSING

PERFORMANCE			
Sensitivity	nA/ppm in <1ppm C ₂ H ₆ O		400 to 650
Response time	t ₉₀ (s) from zero to <1ppm C ₂ H ₆ O		< 30
Zero current	nA in zero air at 20°C		± 200
Noise	±2 standard deviations (ppb equivalent)		20
Range	ppm limit of performance warranty		2
Linearity	ppm error at full scale, linear at zero, <1 ppm C ₂ H ₆ O		< 0.13
Overtgas limit	maximum ppm for stable response to gas pulse		5

LIFETIME			
Zero drift	ppb equivalent change/year in lab air		± 500
Sensitivity drift	% change/year in lab air, monthly test		< 15
Operating life	months until 50% original signal (24 month warranted)		> 36

ENVIRONMENTAL			
Sensitivity @ -20°C (% output @ -20°C/output @ 20°C)			ND
Sensitivity @ 50°C (% output @ 50°C/output @ 20°C)			ND
Zero @ -20°C	nA change from 20°C		± 20
Zero @ 50°C	nA change from 20°C		1800 to 2200

CROSS SENSITIVITY

CO	sensitivity	% measured gas @ 2ppm	CO	< 125
H ₂ S	sensitivity	% measured gas @ 5ppm	H ₂ S	< 450
NO ₂	sensitivity	% measured gas @ 5ppm	NO ₂	< -90
Cl ₂	sensitivity	% measured gas @ 5ppm	Cl ₂	< -40
NO	sensitivity	% measured gas @ 5ppm	NO	< 25
SO ₂	sensitivity	% measured gas @ 5ppm	SO ₂	< 90
H ₂	sensitivity	% measured gas @ 100ppm	H ₂ at 20°C	< 50
C ₂ H ₄	sensitivity	% measured gas @ 40ppm	C ₂ H ₄	< 120
NH ₃	sensitivity	% measured gas @ 20ppm	NH ₃	< -0.1
CO ₂	sensitivity	% measured gas @ 5% vol	CO ₂	< 0.1

KEY SPECIFICATIONS			
Temperature range	°C		-30 to 50
Pressure range	kPa		80 to 120
Humidity range	% rh continuous		15 to 90
Storage period	months @ 3 to 20°C (stored in sealed pot)		6
Load resistor	Ω (AFE circuit is recommended)		33 to 100
Weight	g		< 13

NOTE: all sensors are tested at ambient environmental conditions, with 10 ohm load resistor, unless otherwise stated. As applications of use are outside our control, the information provided is given without legal responsibility. Customers should test under their own conditions, to ensure that the sensors are suitable for their own requirements.



VOC-B4 Performance Data

Technical Specification

Figure 4 Linearity from 0 to 860ppb (approx) Ethanol

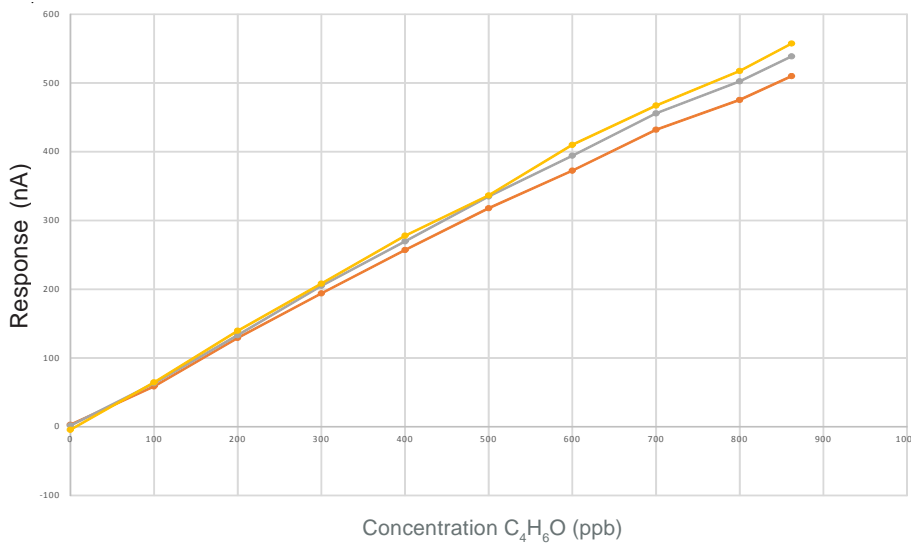


Figure 4 shows example sensor output at concentrations of up to 860ppb Ethanol

Figure 5 Response to 860ppb (approx) Ethanol

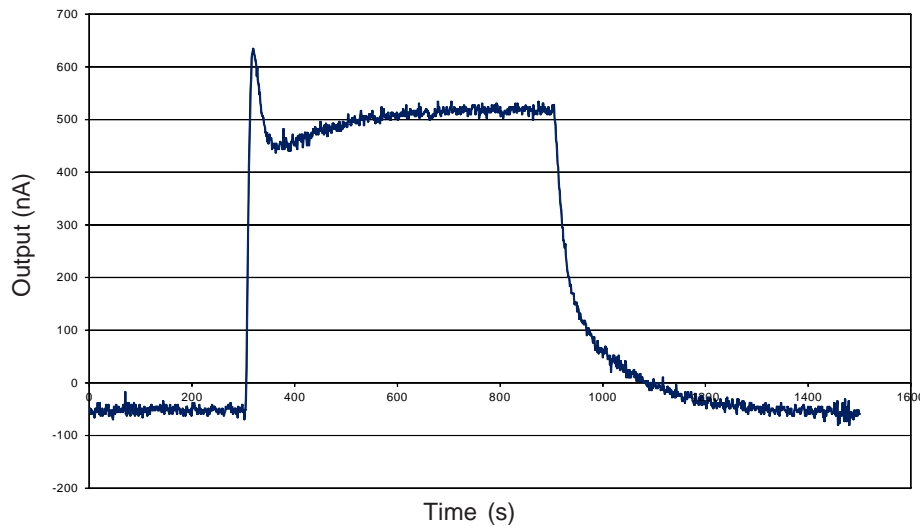


Figure 5 shows example sensor output in response to 860ppb Ethanol

Figure 6 Response to 2ppm C₄H₈ with voltage bias

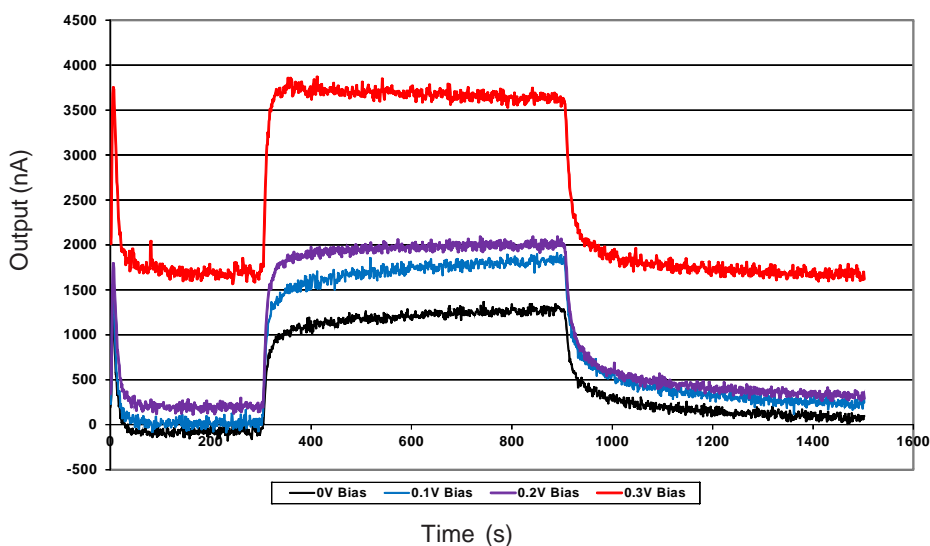


Figure 6 shows example output at different bias voltages in response to 2ppm C₄H₈